


MS...-WPE(-B)

Wall mounting kit

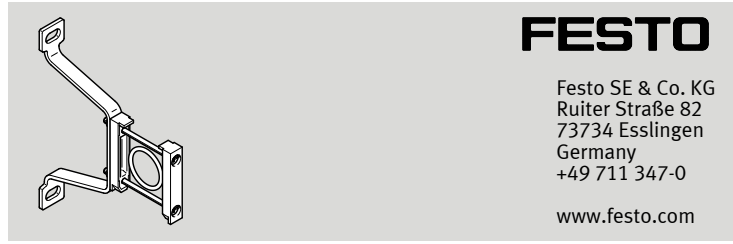

Assembly instructions

8143574
2020-09a
[8143576]



Translation of the original instructions

© 2020 all rights reserved to Festo SE & Co. KG

1 Applicable documents

All available documents for the product → www.festo.com/sp

2 Safety

2.1 Safety instructions

– Only mount the product on components that are in a condition to be safely operated.

2.2 Intended use

The wall mounting kit is intended for wall mounting MS series service unit components.

3 Scope of delivery

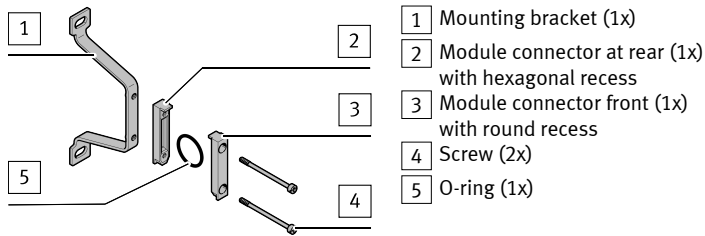


Fig. 1

4 Assembly

4.1 Mounting clearances for combinations of service unit components

Type	1 device	2 devices
MS4-WPE(-B)	40 mm	80 mm
MS6-WPE(-B)	62 mm	124 mm

Tab. 1

4.2 Mounting position of the mounting brackets

Mounting position of the mounting brackets (marked in grey) as a function of the number of devices:

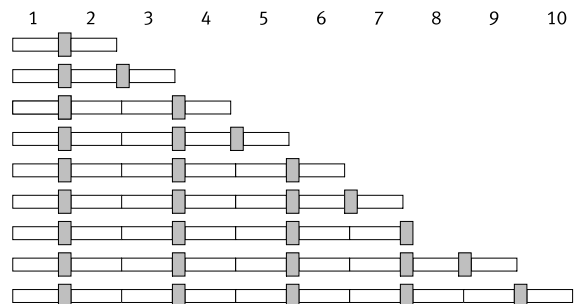


Fig. 2

4.3 Assembly

- Observe mounting clearances of the mounting brackets
→ 4.1 Mounting clearances for combinations of service unit components.

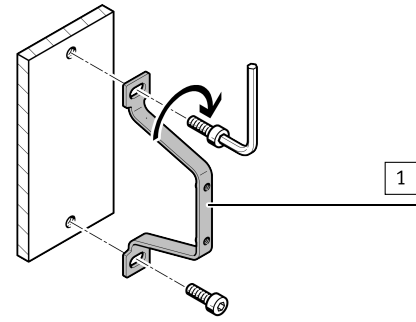


Fig. 3

- Mounting bracket **1** fastened to the wall with suitable screws.
MS4-WPE (-B): screws M5
MS6-WPE (-B): screws M6

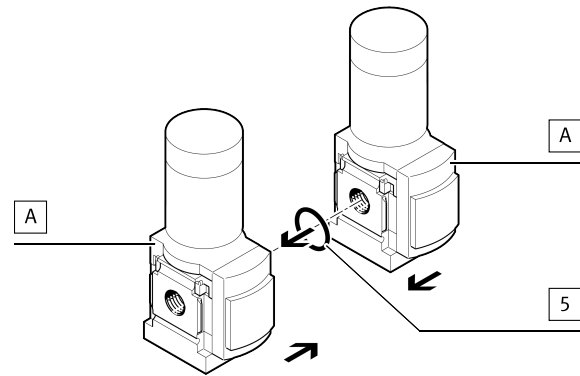


Fig. 4

- Place O-ring **5** between the service unit components [A].

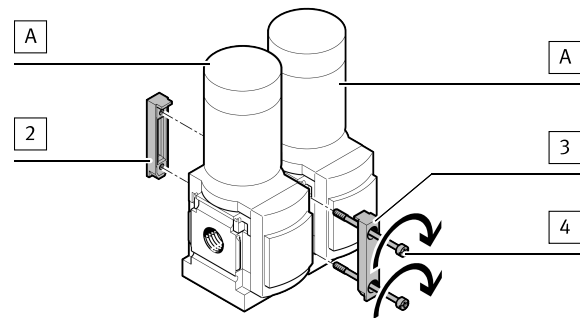


Fig. 5

- Screw in screws **4** completely through the applicable hole of the front module connector **3** until the screw thread no longer grips.
- Place module connector **2** and module connector **3** on the service unit components [A].
- Insert screws **4** completely through the applicable hole of the rear module connector **2**.

4.4 Mounting

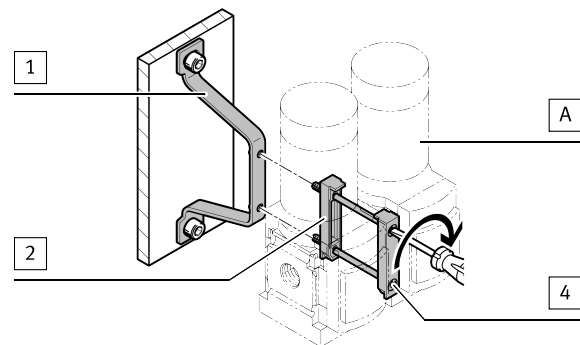


Fig. 6

- Place service unit components [A] with the module connector **2** on the mounting bracket **1**.
- Tighten the screws **4** in the mounting bracket **1**.
 - Tightening torque MS4-WPE (-B): $0.8 \pm 10\%$
 - Tightening torque MS6-WPE (-B): $1.2 \pm 10\%$